



HRVATSKI

FSH-23

VAŽNE SIGURNOSNE UPUTE	
IDENTIFIKACIJA / SASTAVLJANJE DIJELOVA	
UPORABA	
ČIŠĆENJE I POHRANJIVANJE	
ODRŽAVANJE	

Hvala vam na odabiru našeg uređaja. Molimo pročitajte ove upute za uporabu pažljivo prije korištenja.

VAŽNE SIGURNOSNE UPUTE

PROČITAJTE I SPREMITE OVE SIGURNOSNE UPUTE ZA UPORABU PRIJE KORIŠTENJA UREĐAJA

UPOZORENJE: Prilikom korištenja električnog uređaja uvijek se držite osnovnih sigurnosnih mjera kako bi se smanjio rizik od požara, strujnog udara i ozljeda.

Koristite ovaj uređaj samo onako kako je opisano u ovom priručniku. Drugačija uporaba, koja nije preporučena, može uzrokovati požar, strujni udar ili ozljede.

Ovaj je proizvod namijenjen SAMO za kućanstvo, a ne za komercijalnu, industrijsku ili vanjsku upotrebu.

Za zaštitu od strujnog udara: nemojte postavljati uređaj na prozorsku klupčicu, nemojte uranjati uređaj, utikač ili kabel u vodu te nemojte prskati tekućinom.

Zbog smanjenja rizika od udara, ovaj utikač namijenjen je da pristaje utičnici. Ukoliko utikač ne pristaje utičnici u potpunosti, okrenite utikač. Ako i dalje ne pristaje utičnici, kontaktirajte kvalificiranog električara.

NE pokušavajte zanemariti ovu sigurnosnu značajku.

Nije namijenjeno da osobe (uključujući djecu) smanjene fizičke, senzorne ili mentalne sposobnosti, ili s nedostatkom iskustva i znanja, koriste ovaj uređaj, osim ako im je osoba odgovorna za njihovu sigurnost dala uputu o upotrebi uređaja ili ih nadzire.

Djecu treba nadzirati kako bi se osiguralo da se ne igraju s uređajem.

Ugasite uređaj te ga isključite iz struje kada nije u upotrebi, prilikom premještanja s jednog mjesta na drugo i prije čišćenja.

Da biste odspojili uređaj, prvo ga ugasisite, zgrabite utikač i izvadite ga iz zidne utičnice. Nikada ne povlačite utikač za kabel.

Ne upravljajte uređajem u prisutnosti eksplozivnih i/ili zapaljivih para.

Ne postavljajte uređaj ili dijelove u blizini otvorenog plamena, uređaja za kuhanje ili ostalih uređaja za grijanje.

Ne koristite uređaj ukoliko su utikač ili kabel oštećeni, ukoliko je proizvod u kvaru ili ako je proizvod pao ili je oštećen na bilo koji način.

Izbjegavajte kontakt s pomičnim dijelovima ventilatora.

Korištenje priključaka koje proizvođač nije preporučio može uzrokovati štetu.

Postavite ventilator na suhu ravnu površinu.

Nemojte objesiti ili montirati uređaj na zid ili strop.

Ne koristite ako je kućište uređaja oštećeno.

Slabi spoj između električne utičnice i utikača može uzrokovati pregrijavanje ili izobličenje utikača.

Kontaktirajte kvalificiranog električara kako biste promijenili neispravnu ili istrošenu utičnicu.

Koristite na napajanju koje odgovara onome iskazanome na naljepnici uređaja.

 
Kako bi se izbjegla opasnost, oštećeni kabel za napajanje mora zamijeniti proizvođač, njegov servis ili slične kvalificirane osobe.

 
Ovaj uređaj mogu koristiti djeca starija od 8 godina i osobe smanjene fizičke, senzorne ili mentalne sposobnosti, ili osobe s nedostatkom iskustva i znanja, uz nadzor ili uz danu uputu o korištenju uređaja na siguran način te ako razumiju moguće opasnosti. Djeca se ne smiju igrati s uređajem. Djeca ne smiju čistiti i održavati uređaj bez nadzora.

IDENTIFIKACIJA/SASTAVLJANJE DIJELOVA


1. Identifikacija dijelova

- 1] : Prednji otvor ventilatora [10] : Cijev
[2] : Kapa [11] : M5X20 vijci (4 kom)
[3] : Oštrica [12] : Spremnik za vodu
[4] : Matica za montažu [13] : Montaža kotača
[5] : Stražnji ventilator [14] : Ukasni poklopac
[6] : Sklop motora [15] : ST3.5X12 vijke (3 kom)
[7] : Gornja cijev [16] : Poklopac ožičenje
[8] : Tube priključak [17] : Plastična cijev maglica
[9] : M4X10 vijci (4 kom) [18] : Unutarnja žica sa priključnim blokom

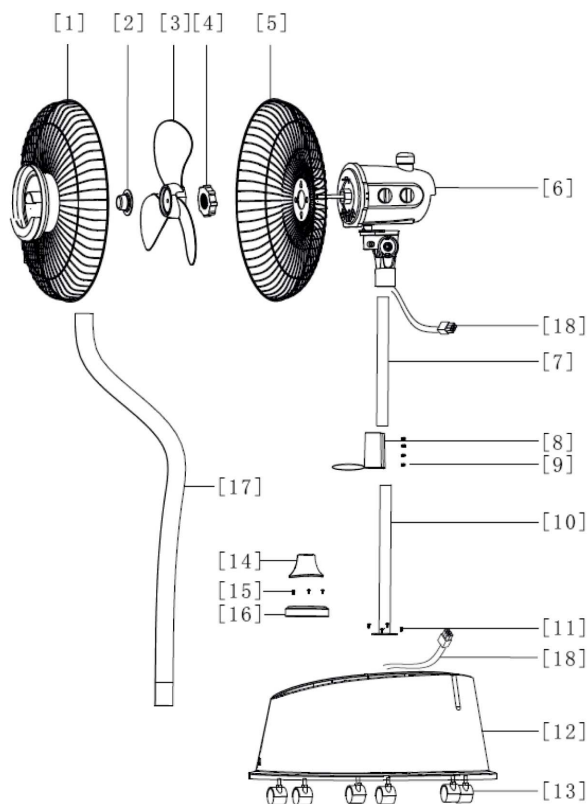


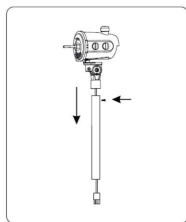

 
1. Umetnuti unutarnje žice motora u gornju cijev.

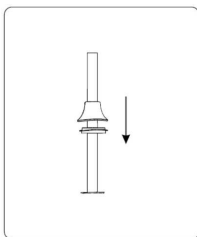

 
2. Stavite poklopac kabelski i ukrasni poklopac u donjem cijevi respektivno.

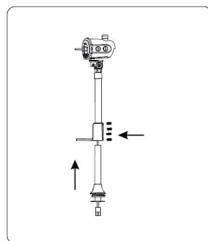

 
3. Umetnite unutarnji kabel motora u donju cijev.
1) 1 korak 2) s priključkom cijevi od vijaka 4 kom M4X10.

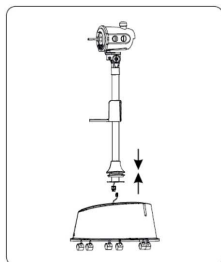

 4. Spojite unutarnje žice motora
Sklop i spremnik za vodu priključivanjem 2 stezaljke.

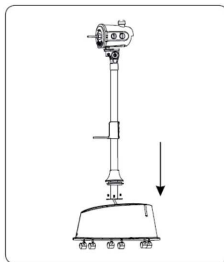

 5. Pričvrstiti korak 4) 4 kom M5X20 vijcima na spremniku.

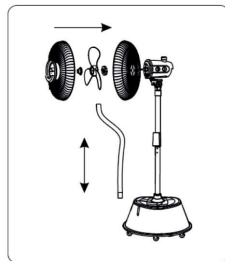

6. Sastavite ventilator korak po korak, kao slici gore od prednjeg do stražnjeg dijela ventilatora.
Zatim umetnite plastičnu cijev na prednji otvor ventilatora i spremnika.

Napomena: U uređaj sipati destiliranu vodu!

Postavite ventilator stabilno na zemlju, i dodati vodu unutar spremnika za vodu prema pet koraka u nastavku.
Bilješka: Ne izvadite spremnik za vodu prije isključivanja utikač kabela za napajanje. Toplu vodu (40 °C i više) ne smije se dodavati u spremnik za vodu.

 


- 1) Otvorite poklopac spremnika za vodu.
- 2) Dodajte vodu, pazite na razinu vode.
- 3) Zatvaranje poklopca spremnika za vodu.

Bilješka: Molimo izmjeriti razinu vode kako bi se izbjeglo prelijevanje vode prilikom dodavanja vode.

2. Funkcije rad

- Provjerite je li uređaj u (OFF) položaju prije uključivanja u strujnu utičnicu.
- Postavite uređaj na čvrstu i ravnu površinu.
- Izbjegavajte preopterećenja ne uključivanjem drugih visoko naponskih proizvoda u istu utičnicu.

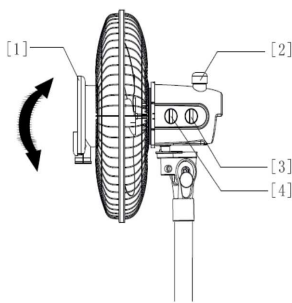

1. Uključite brzine prekidač, za odabir brzine vjetra - 0 (isključeno), 1 (nisko), 2 (MED), 3 (Visoka).
2. Povucite prema dolje oscilacija prekidač, za promjenu smjera vjetra. Podići ovaj poklopac Tank

Opis funkcija

ČIŠĆENJE I POHRANJIVANJE

Prije čišćenja isključite uređaj, odspojite iz napajanja i pričekajte da se uređaj ohladi.

 
Za čišćenje uređaja koristite meku krpu kako biste obrisali prašinu.

Molimo čistite spremnik za vodu svaka dva ili tri tjedna, a žlijeb svaki tjedan.

Molimo izvadite spremnik za vodu prilikom čišćenja i izvadite plastičnu cijev pravilno. Zatim polako izvadite uređaj za izmaglicu i spremnik za vodu.

Koristite suhu krpu za čišćenje uređaja za izmaglicu ili koristite blagi deterđent za čišćenje uređaja za izmaglicu ako ima naslaga.

Uređaj spremite na svježe i suho mjesto ako ga nećete koristiti duže vrijeme.

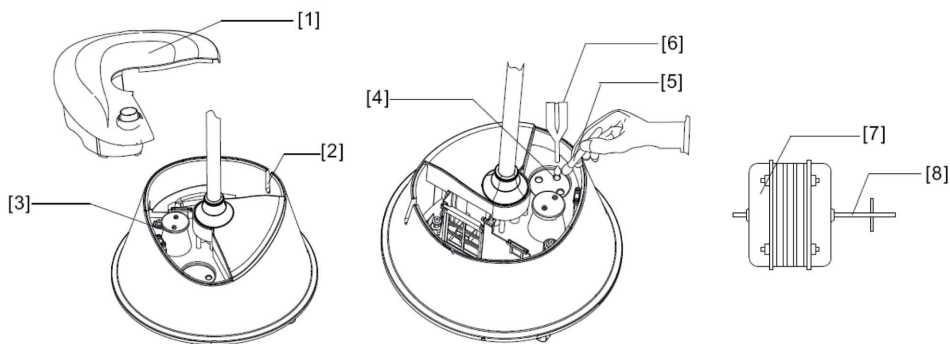

MAINTAINENCE

Neka vaš proizvod popravlja kvalificirana osoba.

Ovaj elektronički proizvod je u skladu s relevantnim sigurnosnim zahtjevima. Popravke trebaju izvršavati kvalificirane osobe, koristeći originalne dodatne dijelove. U suprotnom je moguća opasnost za korisnika. Molimo vas da kontaktirate prodavaonicu gdje ste kupili uređaj za eventualne poslije kupovne usluge.

IMPORTANT SAFETY INSTRUCTIONS
PARTS IDENTIFICATION / ASSEMBLY
OPERATION
CLEANING AND STORAGE
MAINTAINENCE

**Thank you for choosing our appliance. Please read this OWNER'S
MANUAL carefully prior to using and keep it for further reference.**

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING: When using electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.

This product is intended for household use **ONLY** and not for commercial, industrial or outdoor use.

To protect against electric shock: do not place fan on windowsills, immerse unit, plug or cord in water or spray with liquids.

To reduce the risk of shock, this plug is intended to fit the outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.

To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Turn the fan **OFF** and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.

To disconnect the fan, first turn the unit **OFF**, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.

Do not operate the fan in the presence of explosive and/or flammable fumes.

Do not place the fan or any parts near an open flame, cooking or other heating appliance.

Do not operate fan with a damaged cord or plug, or if the product malfunctions, or dropped and damaged in any manner.

Avoid contact with moving fan parts.

The use of attachments not recommended by the manufacturer may be hazardous.

Place the fan on a dry level surface.

Do not hang or mount fan on a wall or ceiling.

Do not operate if the fan housing is damaged.

A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug.

Contact a qualified electrician to replace loose or worn outlet.


Only use on a power supply that matches that shown on the unit's rating label.


If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


PARTS IDENTIFICATION / ASSEMBLY

- | | |
|----------------------------|--|
| [1] : Front fan grill | [10] : Lower tube |
| [2] : Blade cap | [11] : M5X20 screws (4 pcs) |
| [3] : Fan blade | [12] : Water tank |
| [4] : Grill mounting nut | [13] : Wheel assembly |
| [5] : Rear fan grill | [14] : Decorative cover |
| [6] : Motor assembly | [15] : ST3.5X12 screws (3 pcs) |
| [7] : Upper tube | [16] : Wiring cover |
| [8] : Tube connector | [17] : Plastic mist tube |
| [9] : M4X10 screws (4 pcs) | [18] : Internal wire with terminal block |

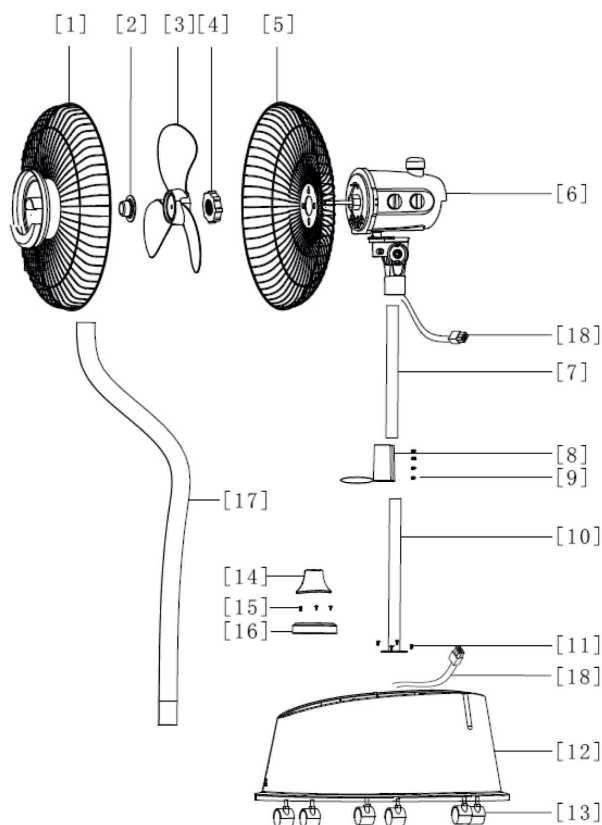 


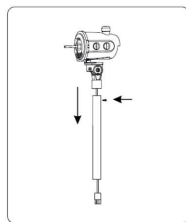 

 
1. Insert the internal wire of motor into the upper tube, then screw to fix the upper tube with motor assembly.

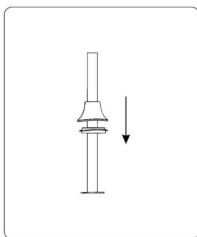

 
2. Put the wiring cover and decorative cover into the lower tube respectively.

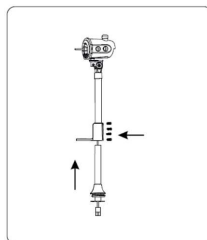

 
3. Insert the internal wire of motor into the lower tube, then connect Step 1) and Step 2) with tube connector by 4 pcs M4X10 screws.

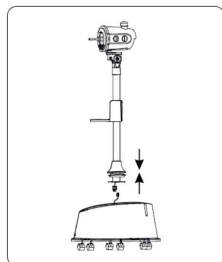

 4. Connect the internal wires of motor assembly and the water tank by plugging 2 terminal blocks.

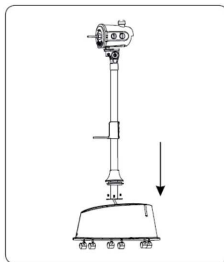

 5. Fasten step 4) with 4 pcs M5X20 screws to the tank.

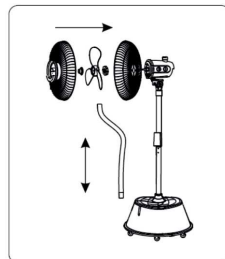

6. Assemble the fan step by step as picture above from front fan grill to rear fan grill. Then insert the plastic mist tube to the front fan grill and the tank.

OPERATION

OPERATION

1. Operating the water tank

5 / 7

Stable the fan on the ground, and add water inside the water tank according to five steps below.

Note: Do not take out the water tank before unplugging the power cord plug.

Hot water (40°C and above) is not allowed to add in the water tank.



1) Open the water tank cover.

2) Add water in the flume, attention the water level.

3) Close the water tank cover.

 
Note: Please eye measure the water level to avoid water overflow when adding water.

2. Functions operation

Please ensure the unit is in the (OFF) position before plugging into the power socket.

Place the unit on a firm level surface.

Avoid overloading the circuit by not plugging other high wattage products into the same power socket.

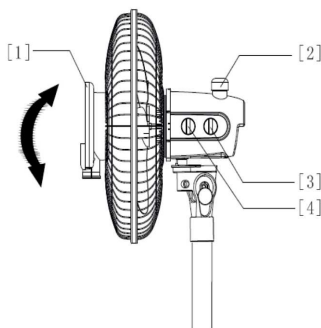

OPERATION

Before cleaning, turn the unit off, unplug from the power supply and wait for the unit to cool down.

 
To clean the unit use a soft cloth to wipe off any dust.

Please clean the water tank every two or three weeks, and clean the flume every week.

Please take out water tank when cleaning it, and pull the plastic tube out of the mist properly. Then slowly remove the mist machine and water tank..

Use dry cloth to clean the mist machine or use mild detergent to clean the mist machine if it has mineral water residue.

Keep the unit in a cool and dry place when not to be used for a long time.

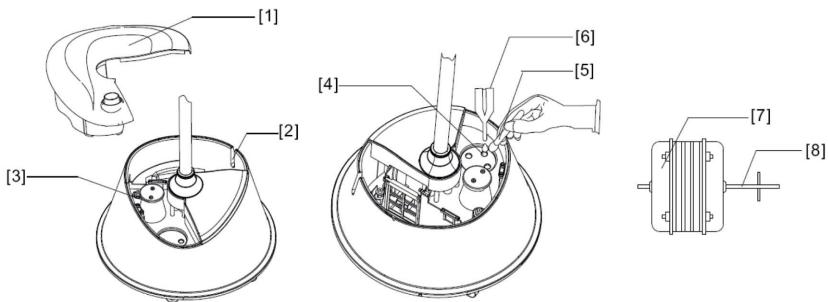

Index Part Name Index Part Name

[1] : Tank cover [5] : Cotton stick

[2] : Overflow gap [6] : Detergent (in the package)

[3] : Exhaust fan outlet [7] : Motor

[4] : Ultrasonic humidifier [8] : Motor shaft

Open the tank cover, use dry cloth to clean the mist machine or use mild detergent to clean the mist machine if it has mineral water residue.

MAINTAINENCE

Have your product repaired by a qualified person

This electric product is in accordance with the relevant safety requirements. Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user.

Please contact the store which you bought the product for after sale services if any.

